INSTRUCTIONS FOR USE OF WASHING/DRYING MACHINE THOMSON THBI68140WD

The following functions are available on your appliance:

A. **Wash only: see page 2**
B. **Wash + dry: see page 3**
C. **Dry only: see page 4**

CONTROL PANEL



Mon cycle = **My choice of cycle**
Lavage et séchage = **Wash and dry**
Rapid 1 H = **Quick 1 hour wash**
Coton = **Cotton**
Synthétique = **Synthetics**
Mixte = **Mixed fabrics**
Séchage = **Drying**
Linge bébé = **Baby clothes**
Rinçage + essorage = **Rinse and spin**
Essorage = **Spin**


Coton eco = **Economical cotton wash**
Sport = **Sportswear**
Rapide 15 min = **Quick 15 minute wash**
Délicat = **Delicate fabrics**
Laine = **Wool**
Couleur = **Coloureds**
Jeans = **Jeans**

Départ différé = **Delayed start**
Temp C° = **Temperature in C°**
Essorage = **Spin**
Séchage = **Drying**
Marche/Arrêt = **Start/Stop**
Départ/Pause = **Start/Pause**


1. Start the machine by pressing the button Start/ Stop [Marche/Arrêt]
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the machine door.
4. Select a programme and choose the desired cycle.

A. WASH ONLY

– Turn the programme selection button to select the desired programme, for example, Cotton [Coton]

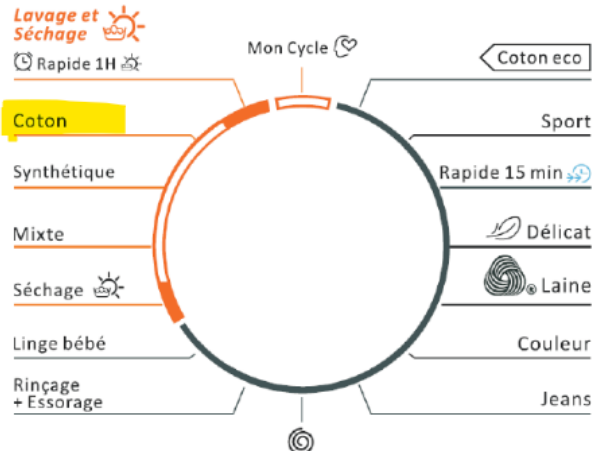

– Press the Temp C° button to choose the desired temperature

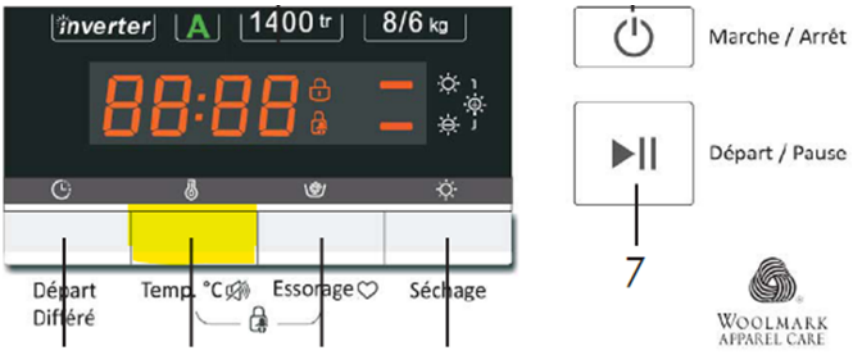


– Press the Start/Pause [Départ/Pause] button and the machine will start its cycle

– When the cycle is finished ‘End’ will show on the screen.


B. WASH + DRY

- Turn the Programme selection button to select the desired programme, for example, cotton [Coton]

- Press the Temp C° button to choose the desired temperature :

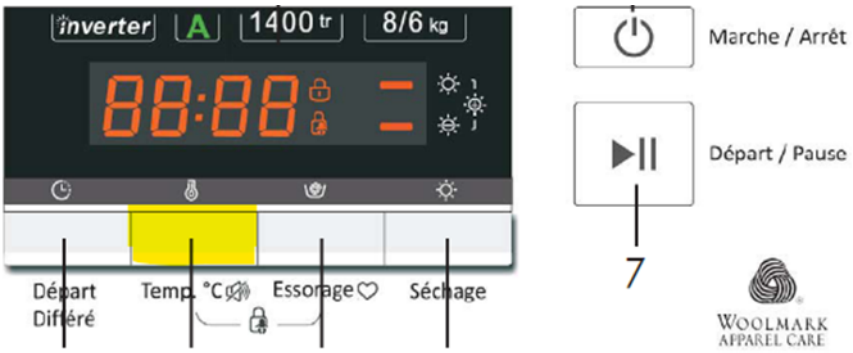

- Press the Dry [Séchage] button several times to choose the desired drying level

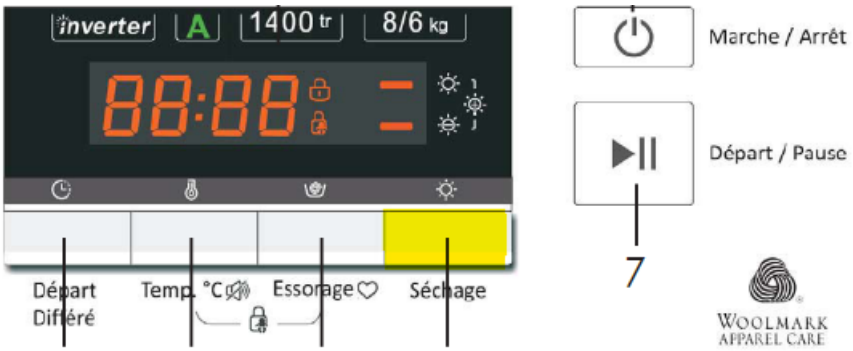

- The following levels of drying are available:
  - Séchage supplémentaire : the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - Séchage normal : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up and allowed to dry completely;
  - Séchage doux : the laundry is left damp enough to facilitate ironing.

- Press the button Start/Pause [Départ/Pause] and the machine will start its cycle


- When the cycle is finished 'End' will show on the screen.

C. DRY ONLY


– You can use the programme Dry only [Séchage] 

if you wish to only dry clothes.

– Turn the Programme selection button to Dry [Séchage]

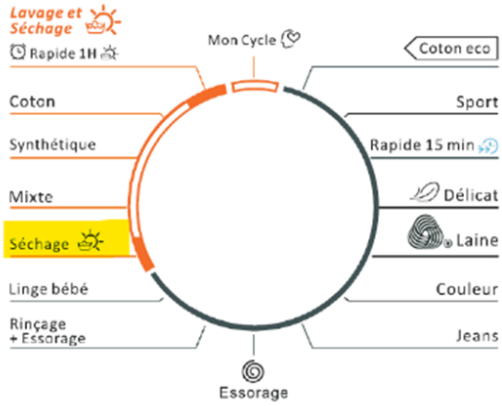

– Press several times on Drying [Séchage] to choose the desired drying level

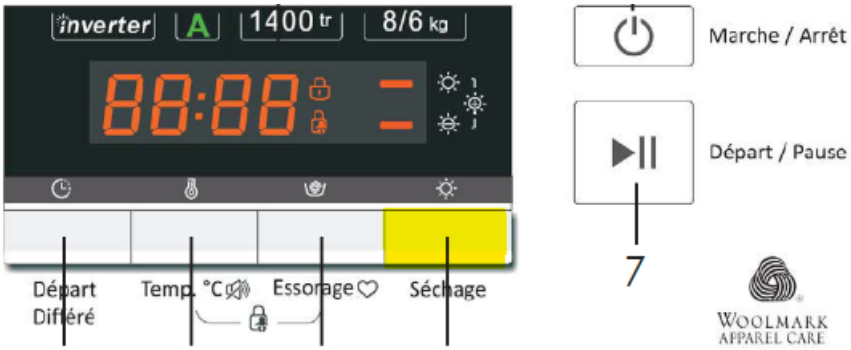

– The following levels of drying are available:

  - 

the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - 

the laundry is slightly damp so that it doesn't crease. Clothes should be hung up and left to dry completely;
  - 

clothes are left damp enough to facilitate ironing.

– Press the Start/Pause [Départ/Pause] button  and the machine will start the cycle.

– When the cycle is finished 'End' will show on the screen.