INSTRUCTIONS FOR USE OF WASHING/DRYING MACHINE THOMSON THWD86140WH

The following functions are available on your appliance:

A. **Wash only: see page 2**
B. **Wash + dry: see page 3**
C. **Dry only: see page 4**

CONTROL PANEL



Mon cycle = My choice of cycle
Lavage et séchage = Wash and dry
Rapid 1 H = Quick 1 hour wash
Coton = Cotton
Synthétique = Synthetics
Linge bébé = Baby clothes
Mixte = Mixed fabrics
Séchage – Drying
Rinçage + essorage = Rinse and spin
Essorage = Spin


Coton eco = Economical cotton wash
Sport = Sportswear
Rapide 15 min = Quick 15 minute wash
Délicat = Delicate fabrics
Laine = Wool
Couleur = Coloureds
Jeans = Jeans

Départ différé = Delayed start
Séchage = Drying
Temp C° = Temperature in C°
Essorage = Spin
Marche/Arrêt = Start/Stop
Départ/Pause = Start/Pause


1. Start the machine by pressing the button Start/Stop [Marche/Arrêt]
2. Put your laundry and the detergent capsule directly into the machine.
3. Close the machine door.
4. Select a programme and choose the desired cycle.

A. WASH ONLY

- Turn the programme selection button to select the desired programme, for example, Cotton [Coton]

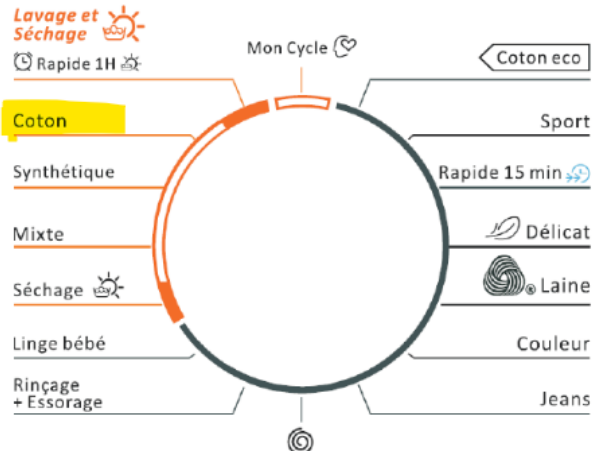

- Press the Temp C° button to choose the desired temperature

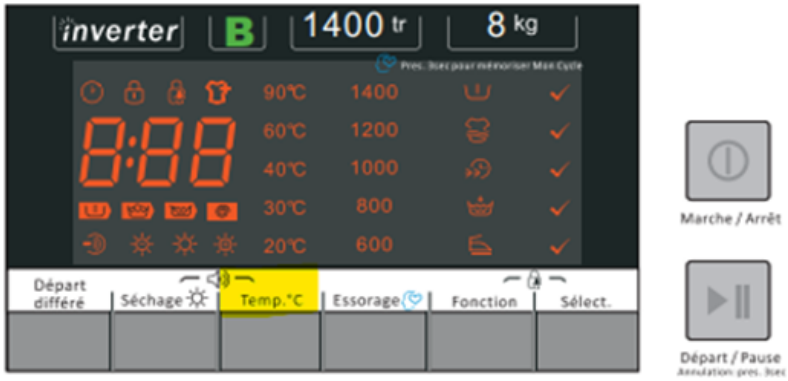

- Press the Start/Pause [Départ/Pause] button and the machine will start its cycle
- When the cycle is finished 'End' will show on the screen.


B. WASH + DRY

- Turn the Programme selection button to select the desired programme, for example, cotton [Coton]

- Press the Temp C° button to choose the desired temperature :



- Press the Dry [Séchage] button several times to choose the desired drying level

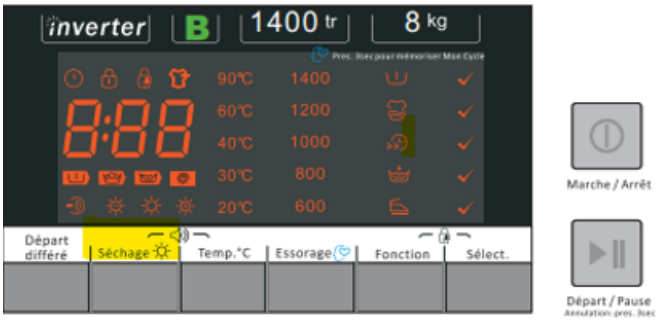

- The following levels of drying are available:
  - Séchage fort : the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - Séchage normal : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up and allowed to dry completely;
  - Séchage doux : the laundry is left damp enough to facilitate ironing.

- Press the button Start/Pause [Départ/Pause] and the machine will start its cycle


- When the cycle is finished 'End' will show on the screen.

C. DRY ONLY


- You can use the programme Dry only [Séchage] 

if you wish to only dry clothes.

- Turn the Programme selection button to Dry [Séchage]

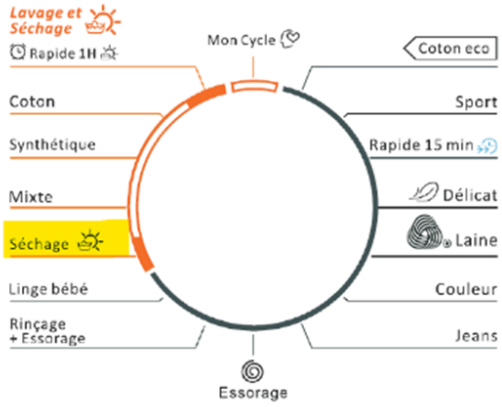

- Press several times on Drying [Séchage] to choose the desired drying level

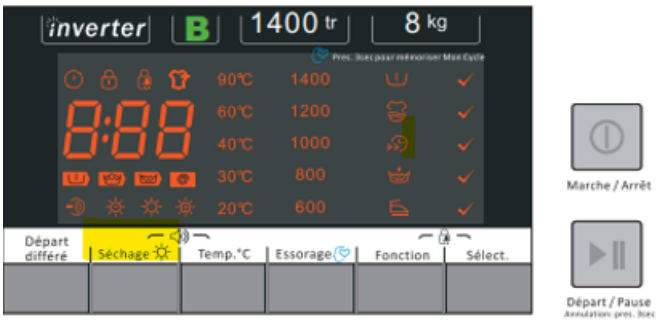

- The following levels of drying are available:
  - 
Séchage fort the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - 
Séchage normal the laundry is slightly damp so that it doesn't crease. Clothes should be hung up and left to dry completely;
  - 
Séchage doux clothes are left damp enough to facilitate ironing.

- Press the Start/Pause [Départ/Pause] button  and the machine will start the cycle.

- When the cycle is finished 'End' will show on the screen.