

INSTRUCTIONS FOR USE HOTPOINT MWK422XHAS OVEN

The following functions are available:

A. **Oven function: see page 2**
B. **Microwave function: see page 2**
C. **Child security function: see page 2**

CONTROL PANEL

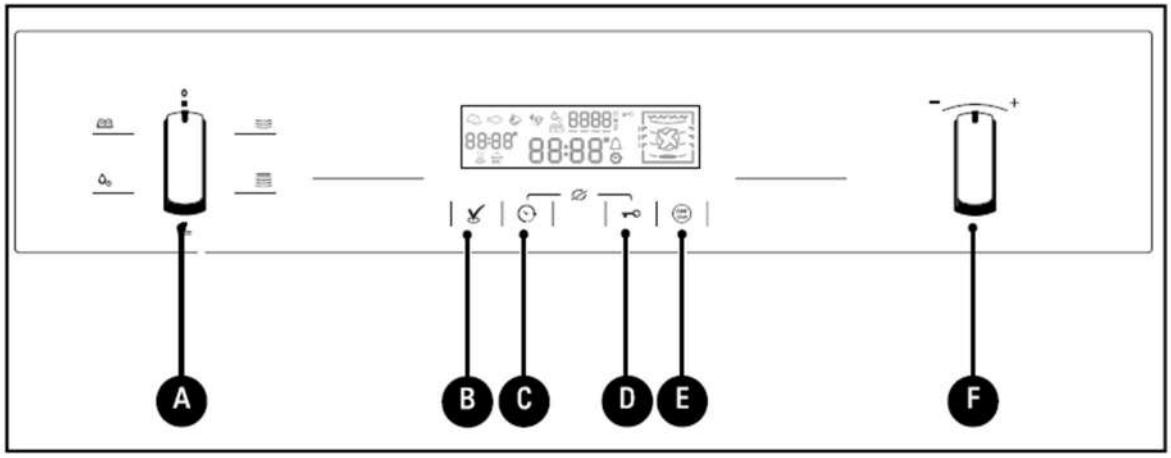

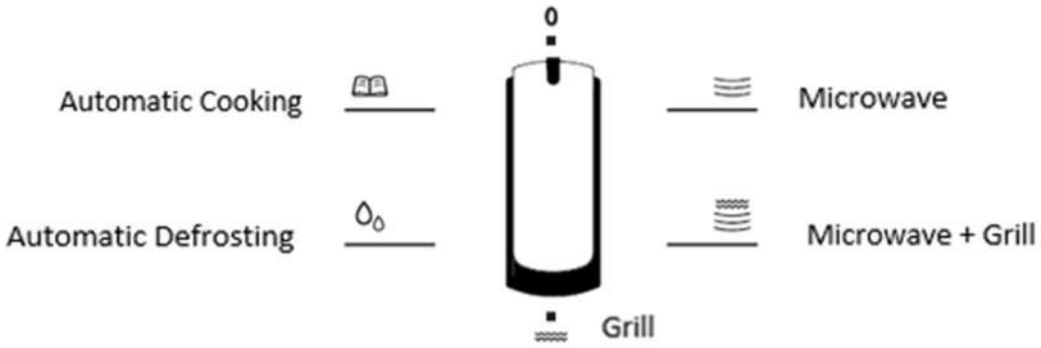

1. Open the oven and insert the food/drink on the rotating plate.
2. Close the door.
3. Select a program.
4. Start the oven by pressing Start/STOP button (button E).

A. OVEN FUNCTION

- Select the Grill mode using the function selection knob (button A).
- Set the cooking time using the + and – buttons on knob F.
- Press twice button B to confirm, and use the + and – buttons on knob F to set the temperature.
- Press the START/STOP button (button E) to confirm and start cooking.

B. MICROWAVE FUNCTION

- Press the Microwave mode using the function selection knob (button A).
- Set the cooking time using the + and – buttons on knob F.
- Press button B to confirm, and use the + and – buttons on knob F to set the microwave power level.
- Press the START/STOP button (button E) to confirm and start cooking.

C. CHILD SECURITY FUNCTION

- LOCKING: Press and hold button D for 5 seconds to lock the appliance until the key symbol appears. A beep sounds to indicate the oven is locked.
- UNLOCKING: On the locked oven, press and hold button D for 5 seconds to unlock the appliance until the key symbol disappears. A beep sounds to indicate the oven is unlocked.