
INSTRUCTIONS FOR USE WASHING/DRYING MACHINE ELECTROLUX EW7W3816BI

The following functions are available on your appliance:

A. **Wash only: see page 2**
B. **Wash + dry: see page 3**
C. **Dry only: see page 4**

CONTROL PANEL

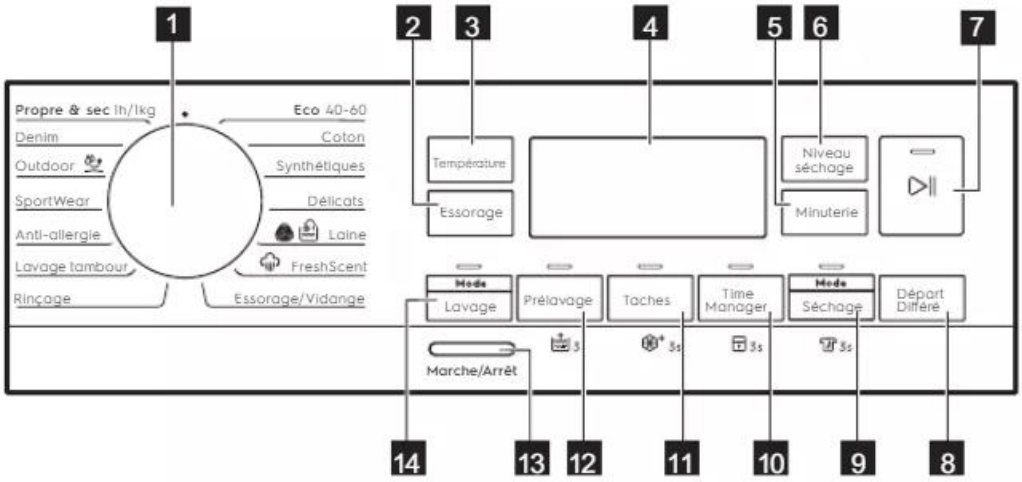

Propre & sec 1h/1kg = Wash & dry 1 hour/1 kg
Denim = Denim
Outdoor = Sportswear
Anti-allergie = Anti-allergic
Lavage tambour = Washing drum
Rinçage = Rinse
Eco 40-60 = Economic 40°-60°

Coton = Cotton
Synthétiques = Synthetics
Délicats = Gentle cycle
Laine = Wool
FreshScent = Add freshener
Essorage/Vidange = Spin/Drain

2. Essorage = Spin
3. Température = Temperature
5. Minuterie = Timer
6. Niveau séchage = Drying level
8. Départ différé = Delayed start
9. Séchage = Drying
10. Time manager
11. Taches = Stains
12. Prélavage = Prewash
13. Marche/Arrêt = Start/Stop
14. Lavage = Wash

1. To start the machine press button 13 Start/Stop [Marche /Arrêt].


2. Put your laundry and the detergent capsule directly into the machine.

3. Close the door of the machine.


4. Choose the desired programme and cycle.

A. WASH ONLY

- Press button 1 to choose the desired type of wash, for example, cotton [coton]

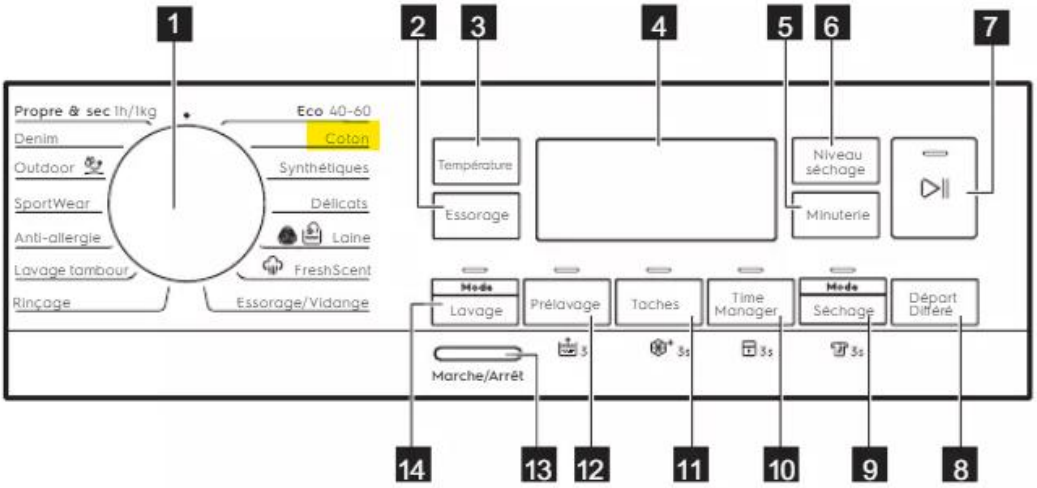

- Using button 3 choose the desired temperature

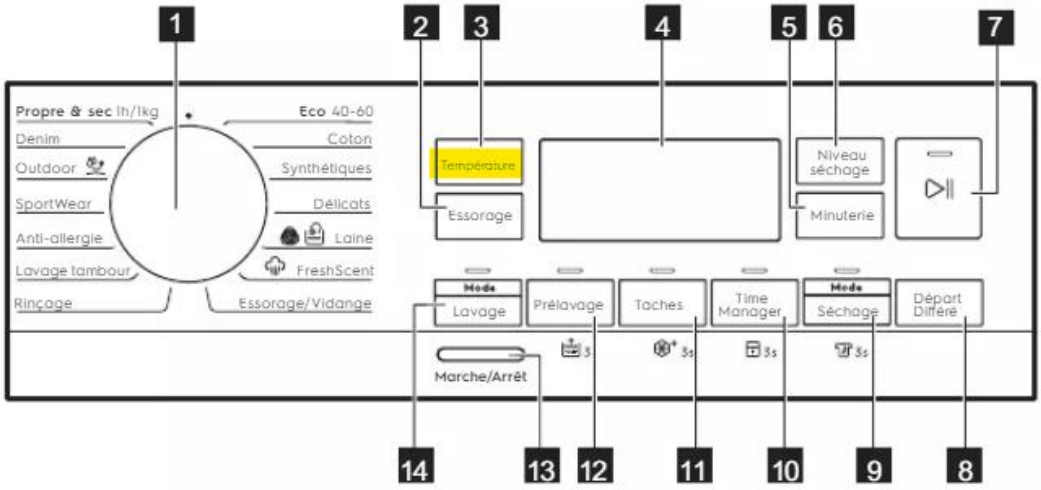


- Press button 7 START/PAUSE [DEPART/PAUSE] : The corresponding light starts flashing, the door locks and the light 'Door locked' shows

- At the end of the cycle the symbol shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light goes out. Open the door and remove the laundry.

B. WASH & DRY

- Using button 1 choose the type of wash, for example, cotton [coton]
- Choose the desired temperature for the wash by using button 3
- Press button 9 Drying [Séchage]

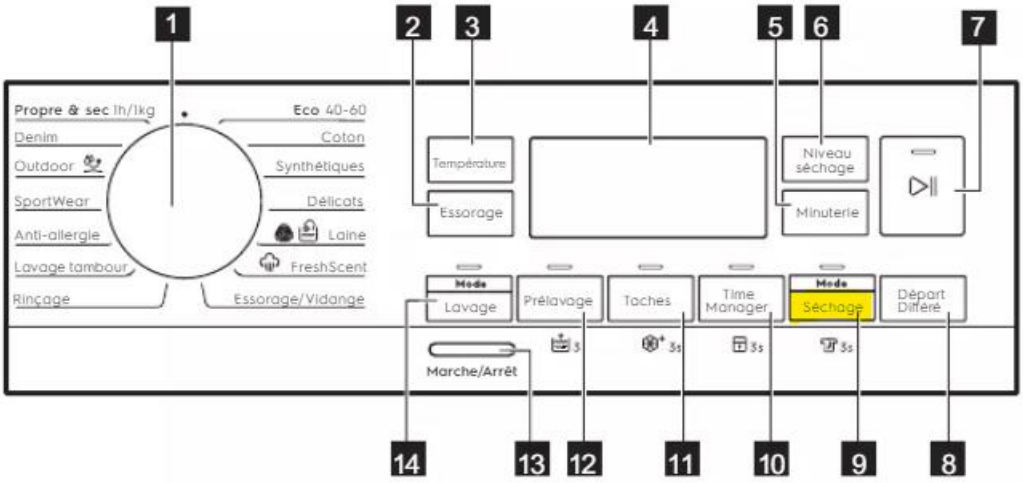

- Select the desired drying level using button 6.


  The following drying levels are available:

  - Completely dry [Très sec] : the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - Ready to hang [Prêt à ranger] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
  - Ready to iron [Prêt à repasser] : clothes are left damp enough to facilitate ironing.

- Press button 7 The corresponding light starts flashing, the door locks and the door locked sign shows.
- At the end of the cycle the signal shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light goes out. Open the door and remove the laundry.

C. DRY ONLY

- Press button 9 Drying [Séchage]
- Deactivate the washing action using button 14 Wash [Lavage] on the control panel

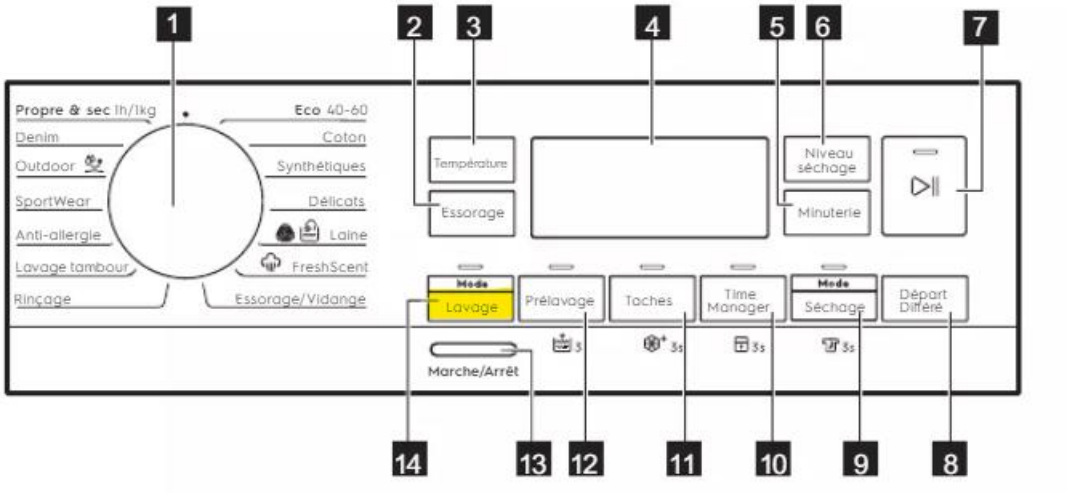

- Choose the desired drying level using button 6

  The following drying levels are available:

  - Completely dry [Très sec] : the laundry is completely dry and can be put away in the wardrobe without being ironed;
  - Ready to hang [Prêt à ranger] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
  - Ready to iron [Prêt à repasser] : clothes are left damp enough to facilitate ironing.

- Press button 7 The door will lock, the corresponding light will start flashing and the light Door locked [Hublot verrouillé] shows.

- At the end of the cycle 0:00 shows and the light Start/Pause [Départ/Pause] goes out. The door can only be opened once the light goes out. Open the door and remove the laundry.