INSTRUCTIONS FOR USE
IKEA MIRAKULÖS OVEN

The following functions are available:

A. **Oven function: see page 2**
B. **Child security function: see page 2**

CONTROL PANEL

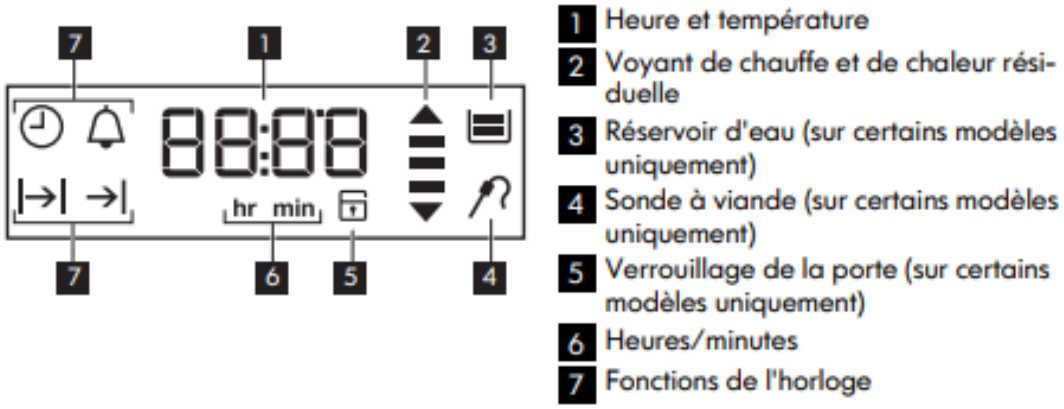

1. **Time and temperature**
2. **Heating and residual heat indicator light**
3. **Water tank (certain models only)**
4. **Meat sensor (certain models only)**
5. **Door lock (certain models only)**
6. **Hour/minutes**
7. **Clock functions**

1. Open the oven door and put in the food.
2. Close the door.
3. Select a programme.

A. OVEN FUNCTION

- Turn the oven function button to activate the conventional cooking mode 
- Turn the thermostat button to select the desired temperature.
- Press the button  until the symbol  appears then press + or – to set the cooking time. Press once more on  to confirm.
- To turn off the oven turn the oven function button to the Off position.

B. CHILD SECURITY FUNCTION

- To activate or turn off the child security function press button 5  then press simultaneously buttons  and + for 2 seconds