INSTRUCTIONS FOR USE WASHING/DRYING MACHINE HOTPOINT ARISTON CAWD129EU

The following functions are available on your appliance:

A. **Wash only: see page 2**
B. **Wash + dry: see page 3**
C. **Dry only: see page 4**

CONTROL PANEL

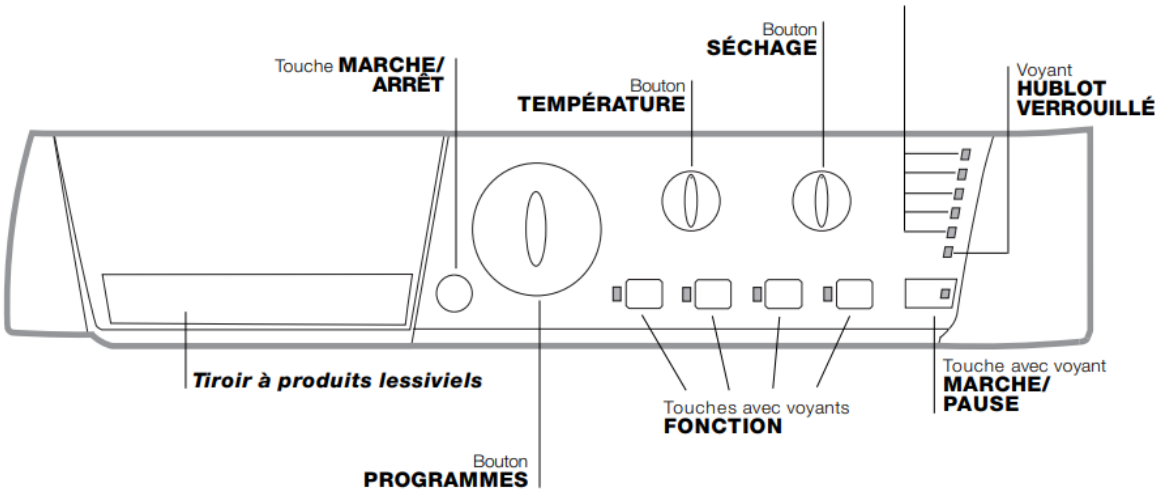

MARCHE/ARRÊT = **START/STOP**
TEMPÉRATURE = **TEMPERATURE**
SÉCHAGE = **DRYING**
HUBLOT VERROUILLÉ = **DOOR LOCKED**
Tiroir à produits lessiviels = **Detergent drawer**
PROGRAMMES = **PROGRAMMES**
Touches avec voyants FONCTION = **FUNCTION buttons with lights**
Touche avec voyant MARCHE/PAUSE = **START/PAUSE button with light**

1. To start the machine press START/STOP [MARCHE ARRÊT].

2. Put your laundry and the detergent capsule directly into the machine.

3. Close the machine door.

4. Select a programme and choose the desired cycle.

A. WASH ONLY

– Using the PROGRAMMES button select the desired programme, for example, Cotton [Coton] (2) :

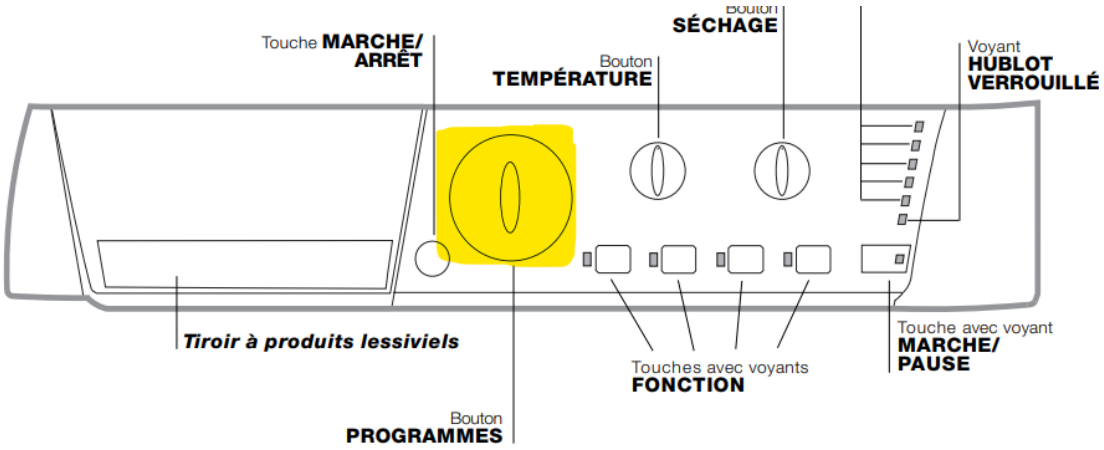

– Using the TEMPERATURE [TEMPÉRATURE] button select the desired temperature for the wash.

– Switch on by pressing the START/STOP [MARCHE/ARRÊT] button. All lights will come on for a few seconds then go off, only the START/PAUSE [MARCHE/PAUSE] light will flash.

– At the end of the cycle the word '**END'** will appear on the screen. The light 'DOOR LOCKED' [HUBLOT VERROUILLÉ] will go out indicating that the machine door can be opened. Open the door and remove the laundry.

B. WASH + DRY

– Using the PROGRAMMES button select the desired programme, for example Cotton [Coton]

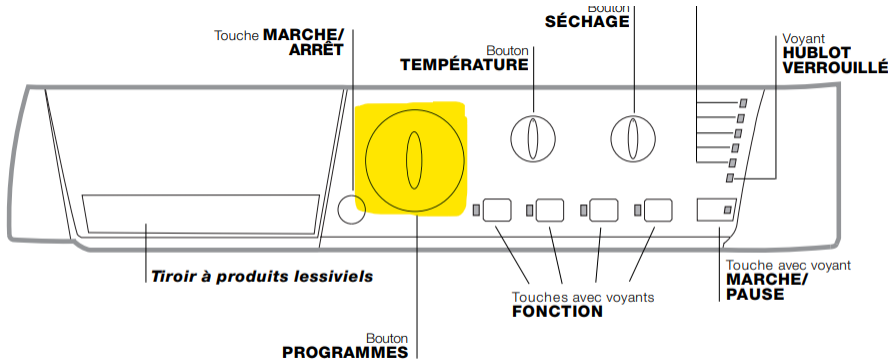

– Turn the DRYING [SÉCHAGE] button to select the desired degree of drying.

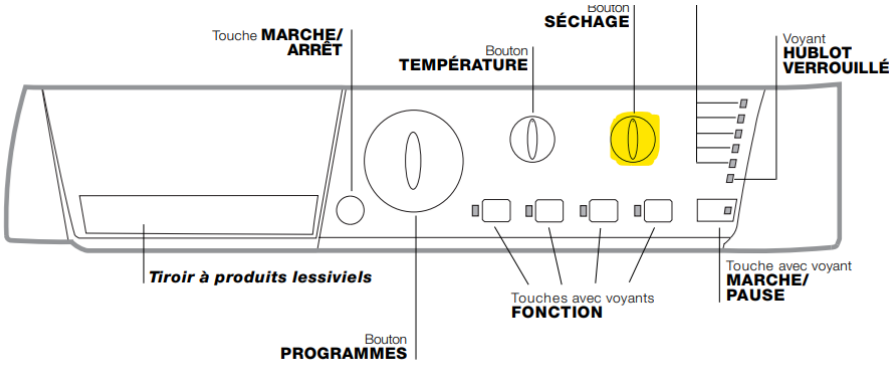

The following levels of drying are available:

- Wardrobe [Armoire] : the laundry is completely dry and can be put away in the wardrobe without being ironed;
- Hanger [Cintre] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
- Ironing [Repassage] : clothes are left damp enough to facilitate ironing.

– To switch on press the START/STOP [MARCHE/ARRÊT] button. All lights switch on for a few seconds then go out and only the button START/PAUSE [MARCHE/PAUSE] flashes.

– At the end of the cycle the word '**END**' appears on the screen. The light DOOR LOCKED [HUBLOT VERROUILLÉ] goes out to indicate that the machine door can be opened. Then open the door and remove the laundry.

C. DRYING ONLY

- Turn the PROGRAMMES button (11) [PROGRAMMES] to that suitable for the type of fabric
- Using the DRYING button [SÉCHAGE] select the desired length of time of the cycle

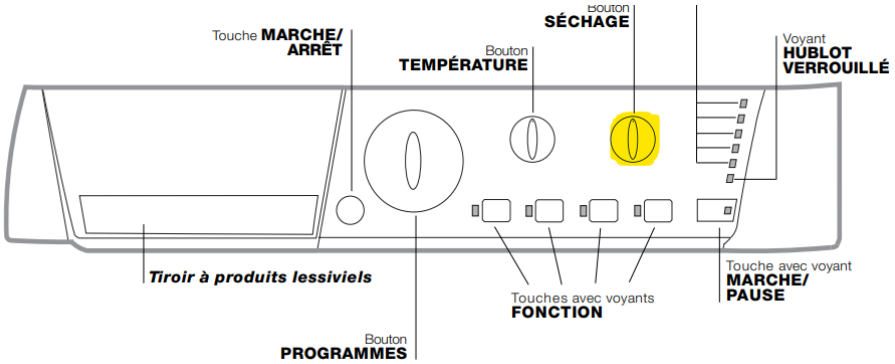

The following levels of drying are available:

- Wardrobe [Armoire] : the laundry is completely dry and can be put away in the wardrobe without being ironed;
- Hanger [Cintre] : the laundry is slightly damp so that it doesn't crease. Clothes should be hung up to finish drying;
- Ironing [Repassage] : clothes are left damp enough to facilitate ironing.

- To switch on press the START/STOP [MARCHE/ARRÊT] button. All lights switch on for a few seconds then go out and only the button START/PAUSE [MARCHE/PAUSE] flashes.
- At the end of the cycle the word '**END**' appears on the screen. The light DOOR LOCKED [HUBLOT VERROUILLÉ] goes out to indicate that the machine door can be opened. Then open the door and remove the laundry.